

Locking Gas Cap Instructions

Installation

1. Insert the key into the gas cap lock.
2. Turn the key counterclockwise. The key will stay in the cap while it is unlocked.
3. Place the cap onto the filler neck. Make sure the tabs on the bottom of the cap line up with the slots on the filler neck.
4. Turn the cap clockwise until it is tight and fully seated.
5. Turn the key clockwise back to the locked position, then remove the key.
6. Once locked, the cap will spin freely. This is normal and prevents the cap from being removed without the key.

Removal

1. Insert the key into the gas cap lock.
2. Hold the cap and turn the key counterclockwise. This unlocks the internal mechanism so the cap can be removed.
3. With the key still turned, rotate the cap counterclockwise until it stops.
4. Lift the cap off the filler neck.

Note: Keep at least one gas cap key on your vehicle key ring so the cap is not misplaced or left behind after refueling.



480-753-0684

Installation Video:



Locking Gas Cap Instructions

Installation

1. Insert the key into the gas cap lock.
2. Turn the key counterclockwise. The key will stay in the cap while it is unlocked.
3. Place the cap onto the filler neck. Make sure the tabs on the bottom of the cap line up with the slots on the filler neck.
4. Turn the cap clockwise until it is tight and fully seated.
5. Turn the key clockwise back to the locked position, then remove the key.
6. Once locked, the cap will spin freely. This is normal and prevents the cap from being removed without the key.

Removal

1. Insert the key into the gas cap lock.
2. Hold the cap and turn the key counterclockwise. This unlocks the internal mechanism so the cap can be removed.
3. With the key still turned, rotate the cap counterclockwise until it stops.
4. Lift the cap off the filler neck.

Note: Keep at least one gas cap key on your vehicle key ring so the cap is not misplaced or left behind after refueling.



480-753-0684

Installation Video:

